 
 


INMU USER MANUAL

OVERVIEW

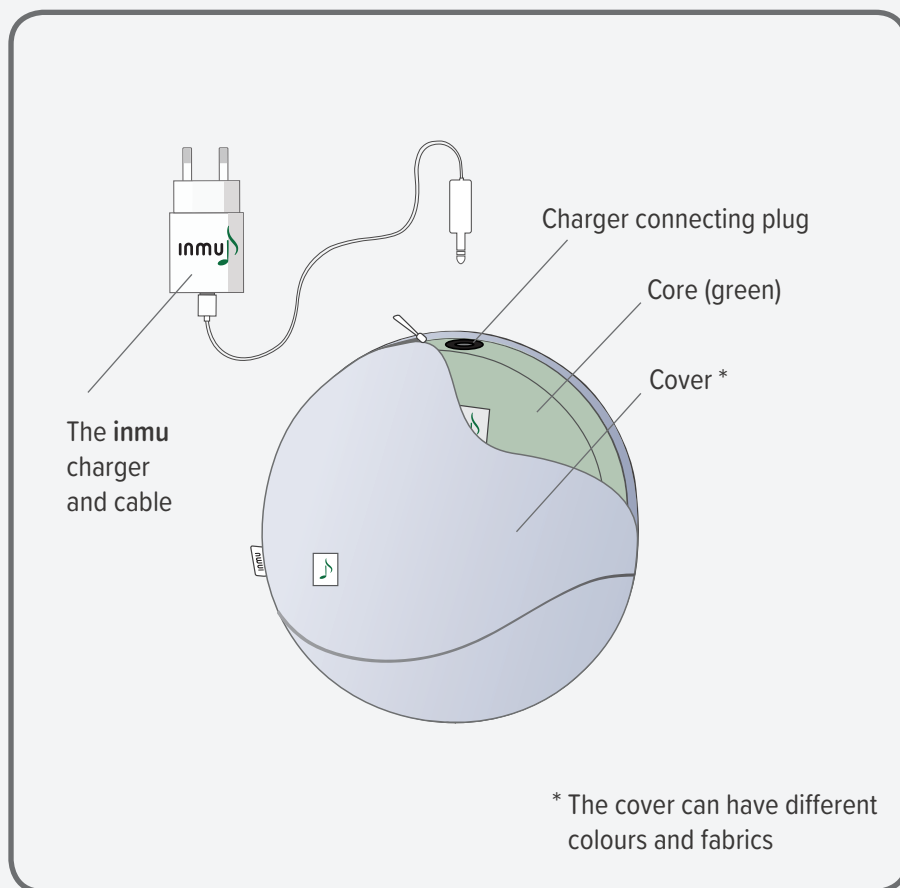 


TURN ON

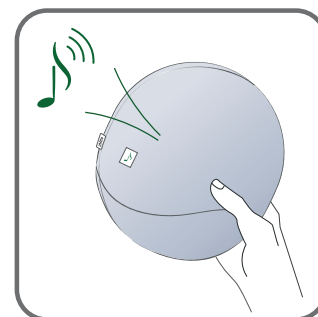


A touch activates the **inmu** and awakens the music. Unplug the cable if it is connected.

TURN OFF

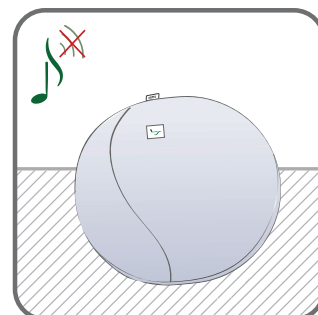

The music automatically stops when the **inmu** is lying still. Please note: No cable is needed.

 DEACTIVATE

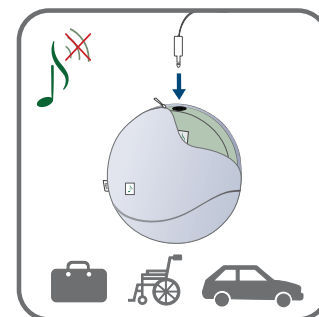


Silent during transport: Unzip the cover and connect the cable. The **inmu** will stay silent until the cable is unplugged.


Watch the instructional videos and learn more about the **inmu** at inmutouch.com/support or contact support at info@inmutouch.com

inmu
touch

 
WASH THE COVER

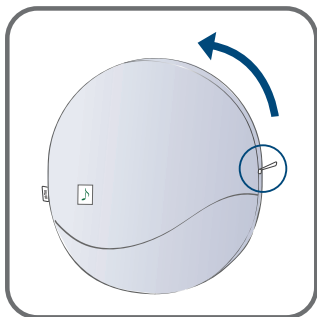

 
Find the zipper pull tab.
Unzip the zipper.
Take off the cover.

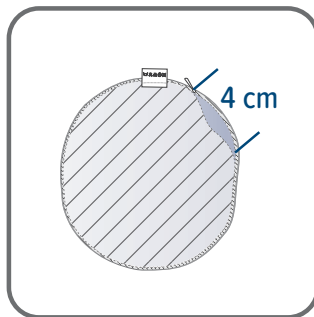

 Turn the cover inside out.
Zip up the cover and leave
4 cm open for easy handling.

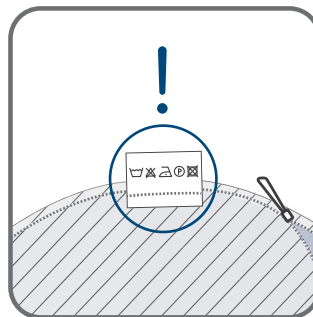


 Wash according to the care
label instructions.

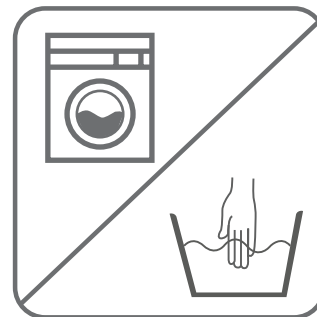


Machine wash or hand wash.

 
DRY THE COVER

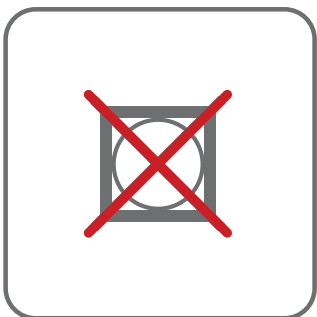


Do not tumble dry.

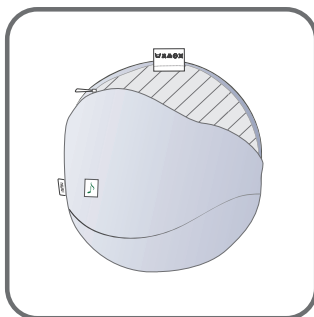 

Turn the cover right side out
again.

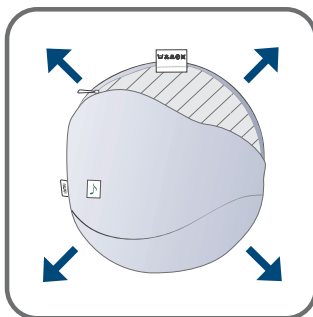 


 While still damp, carefully
stretch the cover into shape.

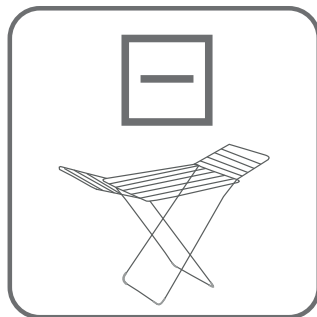


Air dry flat -
e.g. on a towel.

 
PUT ON THE COVER

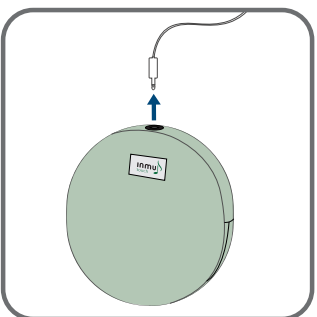

 
Unplug the cable if the
cable is connected.

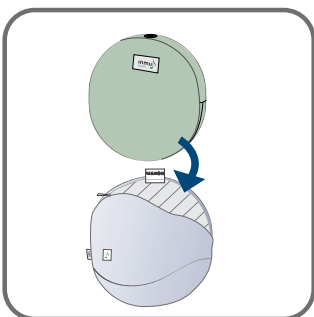

Put on the outer cover.

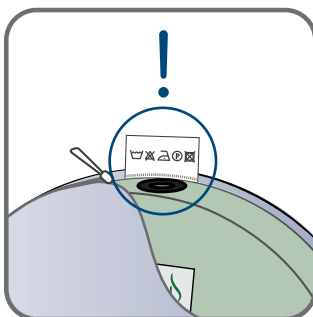 


 Please note! Make sure the care
label and plug are aligned.

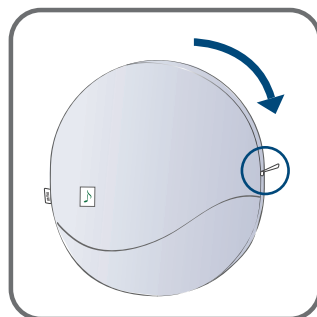


Zip up and conceal
the pull tab.

 
CHARGING

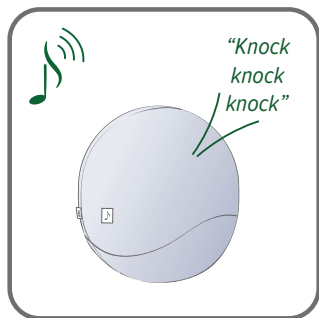

 
When the battery level is low a "Knock, knock, knock" signal sound will be heard and the inmu needs to be charged.

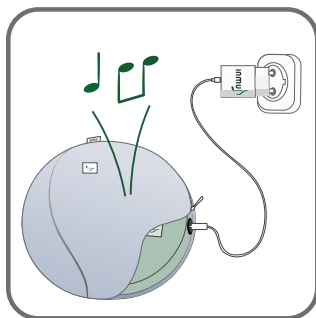

 Find the pull tab of the zipper. Unzip the cover. Connect the cable and the charger. A signal sound indicates that charging has begun.

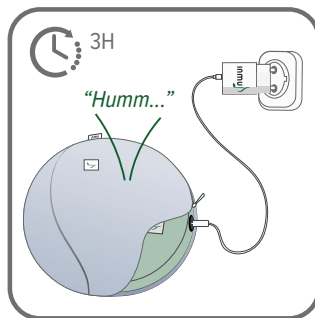


 Charging time: up to 3 hours. A "Hummm..." sound will be heard until the battery is fully charged. The volume of sound reflects the battery level.

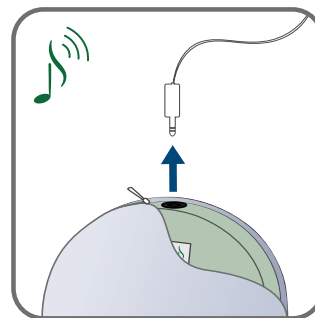


When the "Hummm..." sound stops the inmu is fully charged. Unplug the cable, zip up the cover and conceal the pull tab.

 
VOLUME (Please follow these instructions closely or watch the instructional videos at inmutouch.com/support) * Not supported by all inmu models. See inmutouch.com.

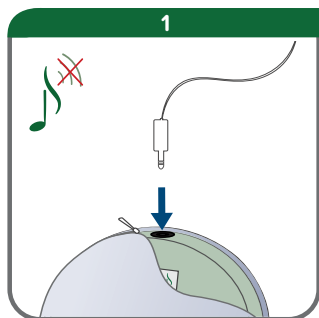

 
1. Awake the music. Connect the cable and the inmu goes silent. Then immediately ...

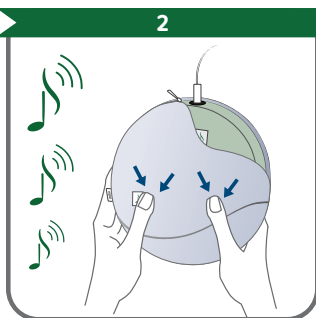

 2. ... squeeze firmly on both sides simultaneously. Listen and stop at the preferred volume: Low, medium or high and then immediately...

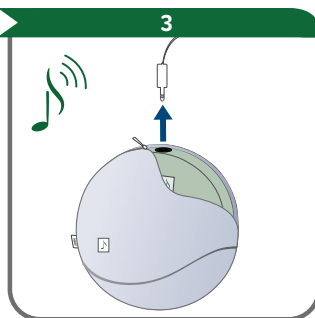

 3. ... unplug the cable to save the preferred setting. Zip up the cover and conceal the pull tab.

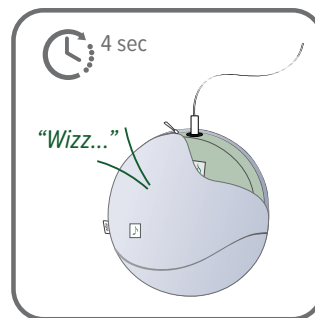

The setting should be completed within 4 sec. If a "Wizz..." signal sound is heard the new setting was not successful. Then repeat steps 1-2-3.

 
MAINTENANCE




The inmu is water repellent. It can be wiped with a damp cloth.



The cover and the core can be wiped with a disinfectant tissue.

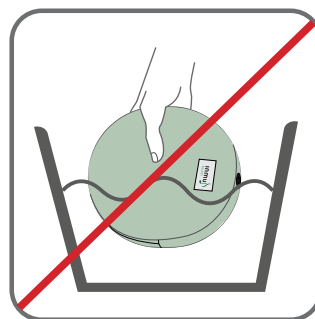

Attention!
The inmu is NOT watertight.

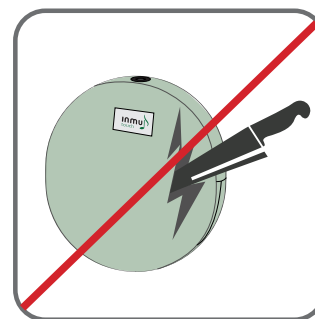 

Attention! Do not disassemble the inmu (core).

 
DISPOSAL



The **inmu** has a rechargeable Lithium-ion battery, which corresponds to the EU-directive 2006/66/EC. It must not be disposed of as ordinary household waste. Please follow your local regulations for battery disposal to prevent negative impact on the environment and health.

Model name: **inmu Soprano**
Product name: **inmuRELAX** and **inmuDANCE**

RECYCLING

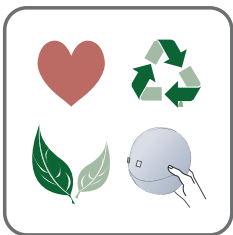

The **inmu** is made of materials that are as sustainable, natural and hypoallergenic as possible. We make our products with care, consideration and dignity. Touch the **inmu** – enjoy it and share it with others...

Watch the instructional videos and learn more about the **inmu** at inmutouch.com/support or contact support at info@inmutouch.com

SAFETY ADVICE



- 1 Do not attempt to disassemble the **inmu** or take off the inner cover (the core).
- 2 Avoid striking the **inmu** against sharp or hard objects.
- 3 Keep the **inmu** away from fire.
- 4 Keep the **inmu** away from flammable fluids.
- 5 The **inmu** is NOT watertight. Contact with fluids should be avoided.
- 6 Keep the charger and cable dry.
- 7 Do not leave the **inmu** outdoors or in environments with high humidity.
- 8 The **inmu** should not be used or stored at temperatures below 5° C or above 45° C.
- 9 The **inmu** should not be charged at temperatures below 10° C or above 45° C.
- 10-12 The **inmu** and battery charger should not be exposed to direct sunlight.
- 13-14 Only the original charger and cable should be used when charging the **inmu**.
- 15 The charger must not be dismantled.
- 16 The **inmu** should not be exposed to more than 100 kg of continued pressure.
- 17 The **inmu** can absorb moderate shocks only (avoid drop of more than 2 meters).
- 18 The **inmu** is not made to end in a trash can. Most parts can be reused.

CONTACT

inmutouch.com ApS
Kladrings Stationsvej 20
DK-7130 Juelsminde
Denmark

www.inmutouch.com
Email: info@inmutouch.com
Phone: +45 51 95 50 40

